

# Mounting instruction

**ECOFLEX® 10 / AIRCOM PLUS®**  
TNC-Connector-RP / Art. Nr.: 7384



**1**



Cut off cable tail right-angled.

**2**



Move the nut, clamping ring and rubber washer over the cable tail. Hint: With a bit of Vaseline the rubber washer can be moved easily over the cable sheath.

**3**



Remove 6 mm of the outer sheath with a knife.

**4**




Bend copper braid upwards right-angled. Insert contact sleeve between copper foil and braid until stop. Cut off protruding braid. Move the rubber seal to the front, up to the contact sleeve.

**5**



Remove the copper foil and the dielectric with a knife.


**6**

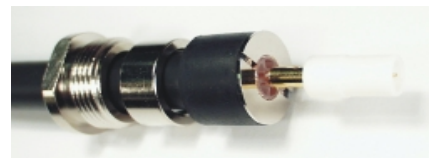

Attach inner pin to the inner conductor and solder carefully. Then put on the Teflon-Isolator. Hint:

Pin 1: 2,8mm Ø AIRCOM PLUS  
Pin 2: 3,0mm Ø ECOFLEX 10.

**7**

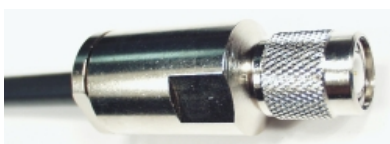

The prepared cable tail has to be inserted into the housing until stop. Tighten the clamping nut finger tight with two open-ended spanners 17/18 mm. A small split should remain visible between clamping nut and connector housing.