


N81EZ-L400 N Jack Crimp 50Ω

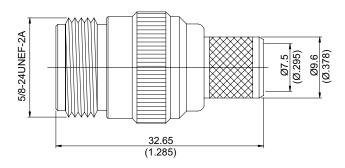

Note: Spring finger design allows for easy assembly

Parts	Material	Plating (Micro-inch)
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Phosphor Bronze	Gold 5 Over Nickel 50 Over Copper 50
Barrel	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:

Suitable Cables: JBY400, LMR400

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.



## CABLE ASSEMBLY INSTRUCTION N81EZ-L400 JYE BAO CO., LTD. В Α **BODY FERRULE DIAGRAM** ASSEMBLY INSTRUCTION Step 1: STRIP AS SHOWN. Step 2: SHARPEN CENTER CONDUCTOR TIP. Step 3: SLIDE FERRULE " B " OVER CABLE. В SHARPEN -Step 4: LOOSEN BRAIDING AND SLIDE CONNECTOR "A" IN PLACE. Step 5: SLIDE FERRULE " B " TOWARDS THE CONNECTOR " A " AND CRIMP.

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.