


TNC6100-9L240

TNC Reverse Polarity Plug Crimp Right Angle 50Ω

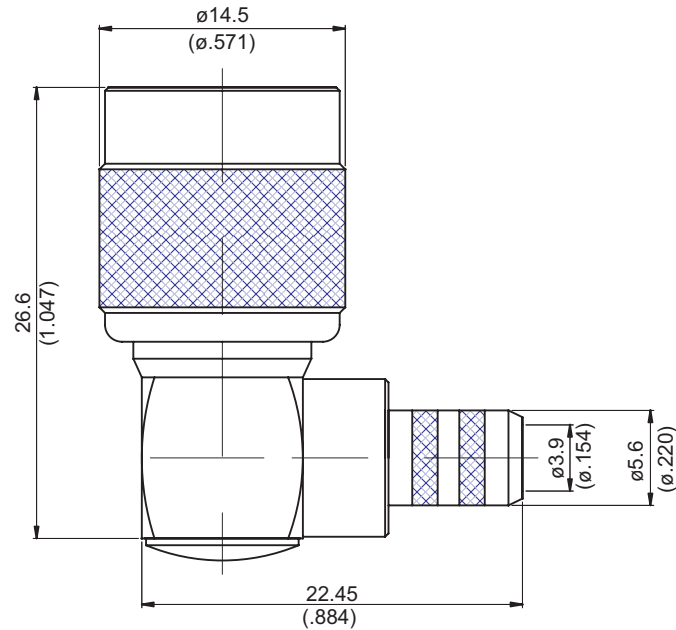

**NOTE: REVERSE POLARITY PLUG**

| Parts        | Material        | Plating(Micro-inch)                      |
|--------------|-----------------|------------------------------------------|
| Ferrule      | Brass           | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Nut          | Brass           | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Gasket       | Silicon         |                                          |
| Washer       | Brass           | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Contact Pin  | Phosphor Bronze | Gold 3 Over Nickel 50 Over Copper 50     |
| Insulator    | Teflon          |                                          |
| Barrel       | Brass           | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Body         | Brass           | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Coupling Nut | Brass           | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |

Weight:

Suitable Cables: JBY240



This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

## CABLE ASSEMBLY INSTRUCTION

TNC6100-9L240

JYE BAO CO., LTD.  
TAIPEI TAIWAN R.O.C

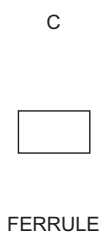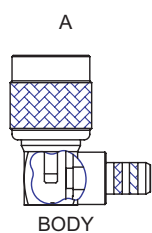

| DIAGRAM | ASSEMBLY INSTRUCTION                                                                                                                                                                  |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         | <p>Step 1: STRIP AS SHOWN .</p>                                                                                                                                                       |
|         | <p>Step 2: SLIDE FERRULE " C " OVER CABLE .<br/>Step 3: WRAP THE BRAIDING UPWARDS.<br/>Step 4: SLIDE CENTER CONDUCTOR ON THE CONTACT PIN OF CONNECTOR " A " AND SOLDER IN " Y " .</p> |
|         | <p>Step 5: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP .</p>                                                                                                            |
|         | <p>Step 6: FINALLY SCREW " B " ON THE CONNECTOR BODY " A " .</p>                                                                                                                      |

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.